

## What's In the Box





### Parts:

- (A) GENESIS (LMS-GEN)
- (B) CLAMPING SCREW (LMS-RMCS)
- (C) POWER SUPPLY (LMS-POWER)
- (D) ADJUSTMENT TOOL (LMS-AT50)

## Installing the Genesis

### Figures

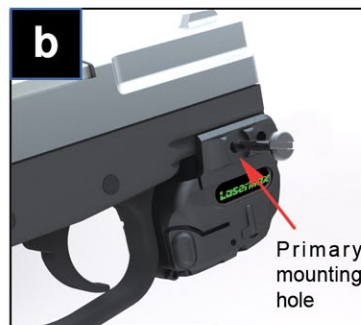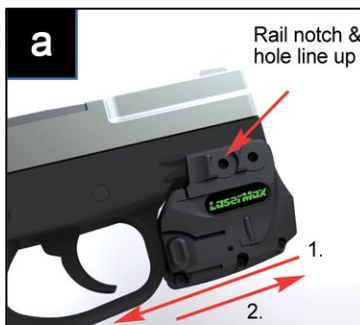

- 1 Remove the magazine from your firearm and clear the action. Make sure your gun is unloaded.
- 2 Check again.
- 3 Loosen and remove the clamping screw from the Genesis.
- 4 Slide the Genesis onto the rail of your firearm. Push it furthest back on the rail, then slide it forward until the mounting hole lines up with the first available notch on the rail (See figure a).
- 5 With firearm & laser pointing forward, insert the clamping screw from the right side (See figure b) until it reaches the locking nut on the opposite side.
- 6 Tighten clamping screw until Genesis grabs firmly onto rail.

**Note:** It is recommended that during installation, the primary mounting hole (see figure b) be used when possible for a more secure fit to the rail.

## Operation



- 1 Point the firearm in a safe direction.
- 2 Tap the activation button located at the rear of the Genesis on either side with your index finger to activate (See figure c).
- 3 Tap either button again to deactivate.

**Feature:** The Genesis is designed with a 10 minute timeout function. This prevents the loss of battery life in the case of an unnoticed accidental activation (See figure d).

## Aligning the Laser



You can easily fine tune your laser to accommodate any weapon platform, type of ammunition, or shooting distance.

- 1 Continue to point the firearm in a safe direction.
- 2 Insert the Adjustment Tool into either alignment port on the left side or bottom of the laser housing (See figure e).
- 3 Fine tune the laser by slowly rotating adjustment tool while checking the laser position against your fixed sights (See figure f). A 1/4" turn = approx 3 inches at 10 yards.

**Note:** This alignment should be done at a **minimum distance of 10 yards**. When installing the Genesis for the first time, a slight shift in alignment may be noticed after firing. Recheck alignment after firing a few magazines and readjust if necessary.

**Windage adjustment:** Marked on left side with R↔L (laser pointing forward), turn adjustment tool toward R to shift laser to the right. Turn tool toward L to shift laser to the left.

**Elevation adjustment:** Marked on bottom side with U↔D (laser pointing forward), turn adjustment tool toward U to shift laser up. Turn tool toward D to shift laser down.

## Recharging the Battery



The micro USB port is protected by a cover that must be moved to expose the recharging port. The LED indicator flashes during charge and is steady when fully charged

The Genesis is shipped in the package with battery charged.



With only one correct orientation, The micro USB end plugs into the USB port to charge the laser battery.

The Genesis has an internal rechargeable battery with a runtime of 2.5 hours. To charge the battery, simply:

- 1 Pull out the Micro USB port protector to expose the USB port. (See figure g)
- 2 Plug the Micro USB connector end into the port (See figure h) and plug the opposite end into a power outlet.

**Recharging time:** Recharge will take approximately 2.5 hours for a full recharge. The battery does not need to be completely drained before recharging. The Genesis may be continuously connected to a power outlet when not in use. If not connected and not in use, it is recommended to fully recharge Genesis every 4 months.

**Recharging Indicators:** When approximately 5 minutes of battery runtime remaining, the laser beam will pulsate at a slower rate. During recharge, the LED indicator will flash, and become solid when fully charged.

**Warnings:** LaserMax is not responsible for any damages that may result from using a power supply other than the one provided with Genesis.

## Cleaning & Maintenance



Over time and after numerous rounds of ammunition, your laser lens could become clouded with gun shot residue. In order to remove this residue:

- 1 Keep firearm pointed in a safe direction. Be sure to unload your firearm and clear any rounds in the chamber keeping hands from passing in front of muzzle. Confirm laser is off.
- 2 Take a standard cotton swab and dampen end with isopropyl alcohol.
- 3 Apply dampened swab to the laser lens, and rotate in a small circular pattern removing any residue. Be sure to clean around the edges of the lens (See figures i & j).

*Note: For best results, it's recommended that the laser lens is cleaned at the end of each day you shoot - similar to routine firearm cleaning.*

## Limited Warranty

**Registration of your product is required in order to receive warranty service. Log on to [www.lasermax.com](http://www.lasermax.com) to fill out the registration form.**

LaserMax, Inc. laser products, except expendable parts, are warranted to be free from defects in material and workmanship for a period of one year from the date of purchase, submitted through warranty registration at [www.lasermax.com](http://www.lasermax.com). Expendable parts shall be defined as batteries, springs, and replaceable plastic parts. Expendable parts of some models have definite life expectancies. They should be replaced as recommended to protect the laser and preserve your warranty. This warranty shall benefit, and may be enforced only by the initial purchaser of the laser system and is not transferable. Warranty is limited solely to repairing or replacing the part(s), at the discretion of LaserMax, Inc.; which proves to be defective during the warranty period. Parts and equipment replaced under warranty will not be returned. Parts and equipment repaired under warranty will be covered for the remaining portion of the original warranty period. This warranty does not apply to equipment or parts which upon inspection by LaserMax, Inc. are determined by LaserMax, Inc. to have become defective or unworkable due to abuse, mishandling, misuse, alteration, negligence, improper installation or maintenance, damage resulting from use of springs not supplied with laser, damage resulting from repair or attempted repair by anyone other than LaserMax, Inc. or a repair facility authorized by LaserMax, Inc., or other causes beyond the control of LaserMax, Inc. All returns must have factory labeling present and legible. All returns require a return authorization number available from our Warranty Department at 1-800-LASER-03. The hours of operation are from 9 a.m. to 5 p.m. EST, Monday through Friday.

**LASERMAX, INC. DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE LASERMAX, INC. LASER PRODUCT IS FOR A PERIOD OF ONE YEAR FROM DATE OF PURCHASE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**

## SPARE PARTS LIST:

**LMS-USBC:** USB Port Cover

**LMS-AT50:** Adjustment Tool

**LMS-POWER:** Power Supply

**LMS-RMCS:** Clamping Screw

LMS-GEN  
Green Laser  
**CLASS 3R VISIBLE LASER**  
Output Power: <5mw  
Wavelength: 532nm  
Battery: 250mAh  
3.7v Lithium  
Polymer



### **DANGER:**

Laser radiation is emitted from the front aperture of the laser when the switch is activated

### **WARNING:**

Avoid direct exposure to beam

**Reminder:** Aiming a laser beam at moving vehicles including boats, aircraft, trains, and construction equipment may be illegal.

Check current applicable laws and follow them accordingly.

The Genesis is not waterproof. Do not submerge in or let come in contact with direct flow of water.

LASERMAX, INC.  
3495 WINTON PLACE  
ROCHESTER, NY 14623 USA