

What's in the Box



Parts:

- (A) LASER HOUSING
- (B) CLAMPING SCREW (LMS-UNI-CS)
- (C) BATTERY COVER (LMS-UNI-BCN-G)
- (D) FLAT HEAD SCREW(2) (LMS-UNI-BCN-G)
- (E) BATTERIES: 1/3 N(2) (LMS-2X13N)
- (F) ADJUSTMENT TOOL (LMS-UNI-AT)
- (G) ACTIVATION SWITCH (LMS-UNI-AS)

*No disassembly required for installation. Batteries pre-installed.

 
 
Installing the Uni-Max™ Laser System

Figures:



- 1 Remove the magazine from your firearm. Clear the action. Make sure your gun is unloaded. (Physically and visually inspect for any possible rounds).
- 2 Check again.
- 3 Slightly loosen the Clamping Screw (Part: B) on the Laser Housing (Part: A) to open rail grips. **Do not remove Clamping Screw** (Part: B). Mount Uni-Max™ on the rail of your firearm, making sure the rail grips on the Uni-Max™ are firmly set into the grooves on rail, and Clamping Screw (Part: B) is in line with notch in rail. (See Figure a)
- 4 Tighten Clamping Screw (Part: B) with fingers (See Figure b). To ensure a secure fit, further tighten Clamping Screw (Part: B) with a screwdriver or coin (a quarter works best). (See Figure c)
- 5 Turn on the laser by pressing in on the Activation Switch (Part: G) from the right or the left side. The center position is off.
- 6 Follow the manufacturer's instructions to attach your choice of other accessories onto the Uni-Max™ IPR (Integrated Picatinny Rail). (See Figure d)

Changing the Batteries

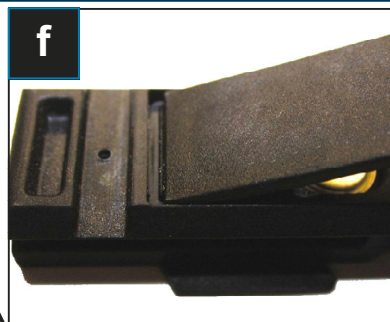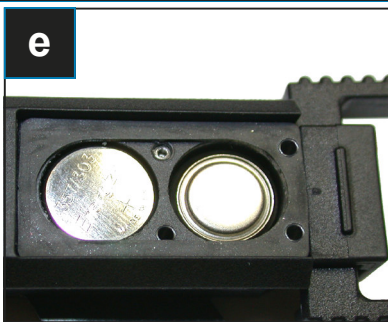

Note correct orientation as printed inside laser housing!

(Left) positive side visible. (Right) negative side visible.

- 1 Unscrew & remove both Flat Head Screws (Part: D) from Battery Cover (Part: C)
- 2 Remove Battery Cover (Part: C) from Laser Housing (Part: A) and insert Batteries (Part: E) into unit as shown. (See Figure e)
- 3 Return Battery Cover (Part: C) to Laser Housing (Part: A), making sure the lip on the cover first engages slot in Laser Housing (Part: A). (See Figure f)
- 4 Install and tighten both Flat Head Screws (Part: D) into Battery Cover (Part: C). Do not over tighten.

TIME OUT! To avoid unintentional battery drain, the Uni-Max™ Green is set to turn off after 10 minutes of constant use. While in the time out mode, simply cycle the activation switch off to refresh the laser, and turn it back on.

Aligning the Uni-Max®



The hole at the bottom adjusts elevation (vertical alignment).



The hole at the side adjusts windage (horizontal alignment).

 
You can easily fine tune your laser to accommodate any weapon platform, type of ammunition or shooting distance.

- 1 To sight in your laser, insert the Adjustment Tool (F) into one of the small alignment ports on the outside of the Laser Housing (A).
- 2 Align laser by slowly turning the Adjustment Tool (F), until laser aligns with your fixed sights. ***Important:** This alignment should be done at a minimum distance of 10 yards. A one-quarter turn equals approximately 3 inches at 10 yards.

Warning: Do not turn Adjustment Tool (Part F) more than one complete turn from factory position. This may cause damage to the Uni-Max® and may void your warranty.

NOTE: When installing Uni-Max™ for the first time, a slight shift in alignment may be noticed after firing, due to settling. Recheck alignment after firing a few magazines; readjust if necessary.

Cleaning & Maintenance

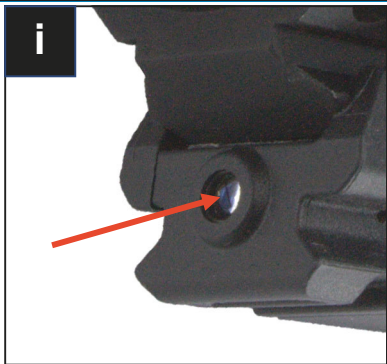

Over time and after numerous rounds of ammunition, your laser lens could become clouded with gunshot residue. In order to remove this residue:

- 1 Keep firearm pointed in a safe direction. Be sure to unload your firearm and clear any rounds in the chamber keeping hands from passing in front of the muzzle. Confirm laser is off.
- 2 Take a standard cotton swab and dampen end with isopropyl alcohol.
- 3 Apply dampened swab to the laser lens and rotate in a small circular pattern removing any residue. Be sure to clean around the edges of the lens. (See figure i & j).

Limited Warranty

Registration of your product is required in order to receive warranty service. Log on to www.lasermax.com to fill out the registration form.

LaserMax, Inc. laser products, except expendable parts, are warranted to be free from defects in material and workmanship for a period of one year from the date of purchase submitted through warranty registration at www.lasermax.com. Expendable parts shall be defined as batteries, springs, and replaceable plastic parts. Expendable parts of some models have definite life expectancies. They should be replaced as recommended to protect the laser and preserve your warranty. This warranty shall benefit, and may be enforced **only** by the initial purchaser of the laser system and is not transferable. Warranty is limited solely to repairing or replacing the part(s), at the discretion of LaserMax, Inc.; which proves to be defective during the warranty period. Parts and equipment replaced under warranty will not be returned. Parts and equipment repaired under warranty will be covered for the remaining portion of the original warranty period. This warranty does not apply to equipment or parts which upon inspection by LaserMax, Inc. are determined by LaserMax, Inc. to have become defective or unworkable due to abuse, mishandling, misuse, alteration, negligence, improper installation or maintenance, damage resulting from use of springs not supplied with laser, damage resulting from repair or attempted repair by anyone other than LaserMax, Inc. or a repair facility authorized by LaserMax, Inc., or other causes beyond the control of LaserMax, Inc. All returns must have factory labeling present and legible. All returns require a return authorization number available from our Warranty Department at 1-800-LASER-03. The hours of operation are from 9 a.m. to 5 p.m. EST, Monday through Friday.

LASERMAX, INC. DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE LASERMAX, INC. LASER PRODUCT IS FOR A PERIOD OF ONE YEAR FROM DATE OF PURCHASE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

LMS-UNI-RG: Removable Rail Grip

LMS-UNI-AT: Adjustment Tool (Part: F)

LMS-UNI-CS: Clamping Screw (Part: B)-includes spring

SPARE PARTS LIST:

LMS-2X13N: Batteries: 1/3N(2) (Part: E)

LMS-UNI-AS: Activation Switch (Part: G)

LMS-UNI-BCN-G: Battery Cover (Part: C) & Flat Head Screw (2)(Part: D)

LMS-UNI-MAS-6: Momentary Activation Switch (6" Cord)

LMS-ADP-SIGMA: Rail Adapter for S&W Sigma Series

LMS-ADP-SHOTGUN: Rail Adapter for 1" shotgun mag tube

ACCESSORIES:

LMS-UNI-MAS-10: Momentary Activation Switch (10" Cord)

LMS-HKADP-C: Rail Adapter for H&K USP Compact

LMS-HKADP-F: Rail Adapter for H&K USP Full Size

LMS-UNI-G

 
GREEN

LASER SIGHT

CLASS 3R VISIBLE LASER PRODUCT

Output: <5 mW

Wavelength: 532 nm

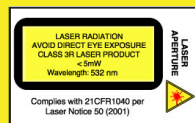

WARNING:

Avoid direct exposure to beam.

LASERMAX, INC.
3495 WINTON PLACE
ROCHESTER, NY 14623 USA

Reminder: Aiming laser beam at moving vehicles including boats, aircraft, trains, and construction equipment may be illegal. Check current applicable laws and follow them accordingly.

Complies with 21CFR1040 per Laser Notice 50 (2001)

1.800.527.3703

Patents Pending

installation guide, continued