 


**WARNING:** Prior to installing, changing battery, aligning flash-light or cleaning & maintenance, make sure pistol is unloaded. If not, unload following the “UNLOADING” instructions in the FN manual.

**WARNING:** Contains a lithium battery. Do not disassemble or incinerate. Keep out of reach of children. Contact poison control center if swallowed. Recycle or dispose of properly.


## LASERMAX INSTALLATION

 Please refer to your FN manual for grip housing removal and installation or visit [www.youtube.com/LaserMaxInc](http://www.youtube.com/LaserMaxInc) for a video tutorial.

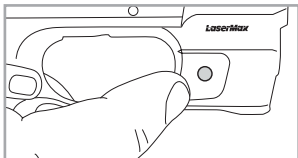

## LASERMAX OPERATION

Locate the activation switch on left or right side of grip housing. Tap switch once to activate. Tap again to deactivate. To change the light from constant to pulsing mode, first, turn the light on, then press and hold the activation switch for approximately three seconds. Repeat the process to return to previous mode.


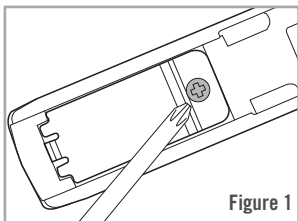


## BATTERY REMOVAL & INSTALLATION

View complete battery replacement video tutorial at [www.youtube.com/LaserMaxInc](http://www.youtube.com/LaserMaxInc).

### FOR LIGHT HOUSING:

  1. Remove battery cover screw with Phillips head screwdriver (not included) (Figures 1).
2. To remove battery, invert grip housing and tap lightly on your hand or flat surface until battery drops out (Figure 2). To avoid damage, do not insert tools or other sharp objects in battery compartment to remove battery.
3. Insert one (1) CR2 Lithium battery in the direction indicated inside compartment.
4. Insert battery cover ensuring cover tab seats into grip housing slot (Figure 3).

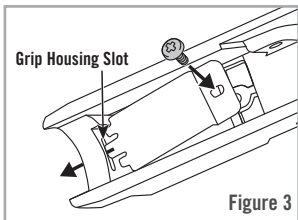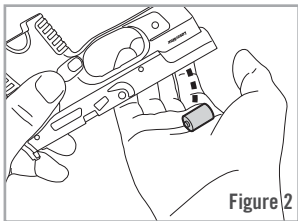

# CLEANING & MAINTENANCE

After repeated fire, your light lens may become clouded with powder residue. For best results, it is recommended that the light lens be cleaned along with your firearm after each use. To clean, follow these steps:

1. Keep firearm pointed in a safe direction.
2. Confirm light is off.
3. Dampen the end of a cotton swab with isopropyl alcohol.
4. Apply dampened swab to light lens and polish in a small circular pattern. Be sure to clean around the edges of the lens.

**WARNING:** Firearm should be cleaned and lubricated exactly as directed in the Owner's Manual. Excess lubricant can interfere with the proper function of both the firearm and the Lightning Laser. LaserMax components should never be submerged or flushed with cleaning solvents. Failure to adhere to these guidelines may cause damage and void the factory warranty.

## LASERMAX LIMITED WARRANTY

LaserMax is pleased to offer a five (5) year limited warranty for this product. To take advantage of this coverage, the product must be registered no later than 90 days after purchase.

This product may be registered by completing a Registration Form which may be found at [www.lasermax.com/support](http://www.lasermax.com/support) or by contacting the LaserMax Customer Service Department at 1-800-527-3703. The LaserMax Limited Warranty extends specific legal rights to the registrant. Other rights, which vary from state to state, may also apply. This product is warranted to be free from defects in material and workmanship at the time of purchase. This limited warranty does not cover expendable parts (ex: batteries), that have definite and predictable life expectancies. This warranty does not cover products that LaserMax determines have been exposed to abnormal use in any way. Examples of abnormal use include, but are not limited to, damage from mishandling, misuse or abuse, damage from exposure to abnormal conditions, damage from improper care and maintenance, or installation of the product in or on any firearm model the product is not specifically advertised to be used with. Warranty coverage begins on the date of purchase and ends five (5) years after date of purchase. This limited warranty extends only to the original registrant and is non-transferable. To file a warranty claim, a warranty repair request must be submitted, and a Return Merchandise Authorization (RMA) number issued by the LaserMax Warranty Department, within five (5) years from date of purchase. Following submission of a warranty claim, LaserMax reserves the right to inspect the product to determine its eligibility for warranty coverage. If deemed

eligible, LaserMax will repair or replace the part(s)/product that LaserMax, at its sole discretion, determines to be defective during the warranty period. If deemed ineligible, LaserMax will return the part(s)/product with an explanation of why coverage is not available. LaserMax reserves the right to replace defective part(s)/product with an equivalent substitute product at its sole discretion. Any and all implied warranties, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, also begin on the date of purchase and end five (5) years after date of purchase. This limitation does not apply to residents of states that disallow limitations on the length of implied warranties. The preceding process is both the exclusive remedy and LaserMax's exclusive liability for any warranty claim. LASERMAX WILL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE FOR ANY INCIDENTAL, INDIRECT, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES (EVEN IF LASERMAX HAS BEEN NOTIFIED OF THE POSSIBILITY OF SUCH DAMAGES) RESULTING FROM OR RELATED TO A PRODUCT, INCLUDING, WITHOUT LIMITATION, ANY LOSS OF PROFIT, OPPORTUNITY, OR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE WARRANTED PRODUCT. THIS LIMITATION DOES NOT APPLY TO RESIDENTS OF STATES THAT DISALLOW LIMITATIONS ON INCIDENTAL OR CONSEQUENTIAL DAMAGES.