

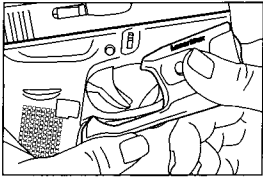


IMPORTANT: Prior to installation, battery change, cleaning or maintenance, follow the Glock Owner's Manual to ensure pistol is unloaded!


INSTALLATION

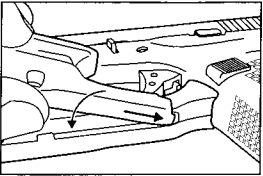


1. Place the rear portion of the *Right Housing* onto the pistol's trigger guard so it sits as far back as possible. Gently press the housing onto the trigger guard, ensuring that it fits snugly.

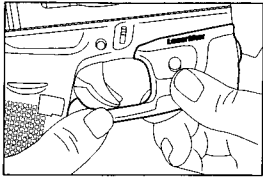


2. Insert *Left Housing* at an angle to interlock tab in notch of *Right Housing*. Close the two halves together making sure that the activation switch is visible through the opening in the *Left Housing*.

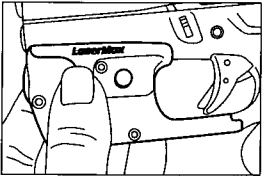

3. Press the two housings together until there is no visible gap. Insert one of the three self tapping mounting screws into each of screw openings in the *Left Housing*. Hand tighten the screws with a Phillips head Φ screwdriver.

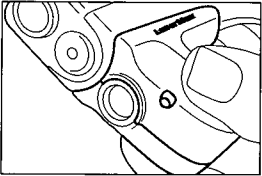

BATTERY REPLACEMENT

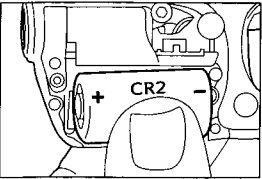

1. Remove the screws from the *Left Housing* and separate it from the trigger guard.
2. Remove CR2 battery.
3. Install a fresh battery with the positive (+) side toward the muzzle.

CLEANING PROCEDURES

After repeated fire, your light lens may become clouded with gun powder residue. For best results, it is recommended that the light lens be cleaned along with the firearm after each use. To clean the lens, follow these steps:

1. Keep firearm pointed in a safe direction.
2. Confirm light is off.
3. Dampen the end of a cotton swab with isopropyl alcohol.
4. Apply dampened swab to light lens and polish in a small circular pattern. Be sure to clean around the edges of the lens.

OPERATING INSTRUCTIONS

Press and release either the right or the left activation switch to turn the light on. Press and release again to turn the light off.



TIMEOUT!

To avoid unintentional battery drain, the light is set to automatically turn off after 10 minutes. When timed out, simply cycle the activation switch to refresh the light and turn it back on.


SWITCHING FROM CONSTANT TO STROBE MODE:

Press and release the activation button to turn light on. Press and hold the activation button for 3 seconds to switch modes. To return to the previous mode, repeat the process.

Right Housing

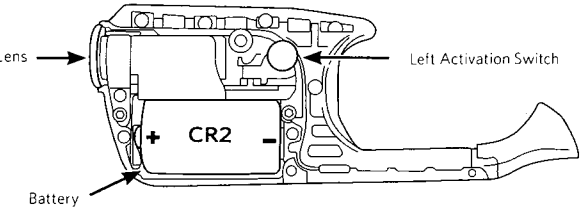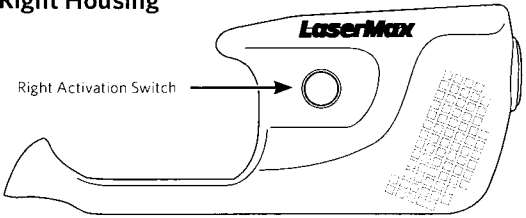

Left Housing

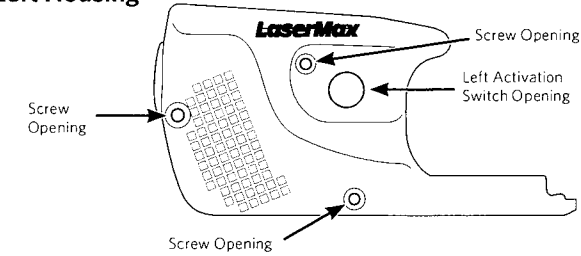

WARNING

Care should be taken when applying oil or lubricant to clean the firearm. Getting oil or lubricant on the light components may cause damage and void the factory warranty. Light assembly should not be submerged or flushed with cleaning solvents.

SPARE PARTS


LMS-CR2 CR2 battery
CF-MS Mounting Screws

For patent information, please visit:
www.lasermx.com/service/patents.aspx.



01785-0-58
Rev A

IMPORTANT: Prior to installation, battery change, cleaning or maintenance, follow the Glock Owner's Manual to ensure pistol is unloaded!


INSTALLATION

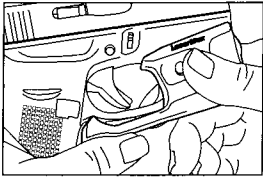


1. Place the rear portion of the *Right Housing* onto the pistol's trigger guard so it sits as far back as possible. Gently press the housing onto the trigger guard, ensuring that it fits snugly.

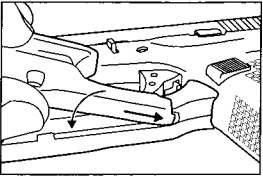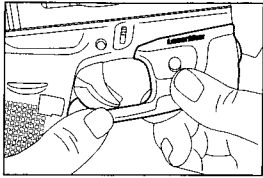


2. Insert *Left Housing* at an angle to interlock tab in notch of *Right Housing*. Close the two halves together making sure that the activation switch is visible through the opening in the *Left Housing*.

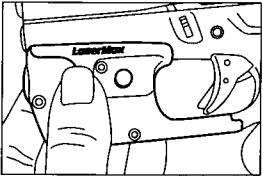

3. Press the two housings together until there is no visible gap. Insert one of the three self tapping mounting screws into each of screw openings in the *Left Housing*. Hand tighten the screws with a Phillips head Φ screwdriver.

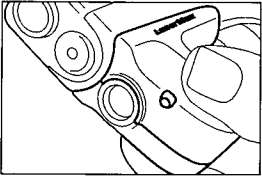

BATTERY REPLACEMENT

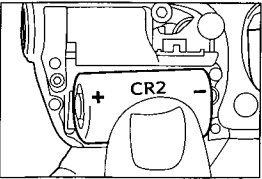

1. Remove the screws from the *Left Housing* and separate it from the trigger guard.
2. Remove CR2 battery.
3. Install a fresh battery with the positive (+) side toward the muzzle.

CLEANING PROCEDURES

After repeated fire, your light lens may become clouded with gun powder residue. For best results, it is recommended that the light lens be cleaned along with the firearm after each use. To clean the lens, follow these steps:

1. Keep firearm pointed in a safe direction.
2. Confirm light is off.
3. Dampen the end of a cotton swab with isopropyl alcohol.
4. Apply dampened swab to light lens and polish in a small circular pattern. Be sure to clean around the edges of the lens.

OPERATING INSTRUCTIONS

Press and release either the right or the left activation switch to turn the light on. Press and release again to turn the light off.



TIMEOUT!

To avoid unintentional battery drain, the light is set to automatically turn off after 10 minutes. When timed out, simply cycle the activation switch to refresh the light and turn it back on.


SWITCHING FROM CONSTANT TO STROBE MODE:

Press and release the activation button to turn light on. Press and hold the activation button for 3 seconds to switch modes. To return to the previous mode, repeat the process.

Right Housing

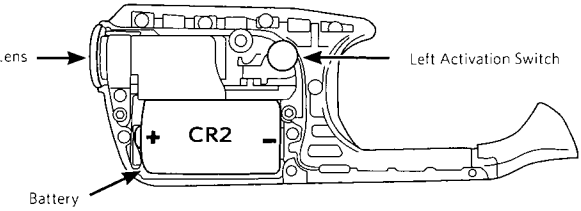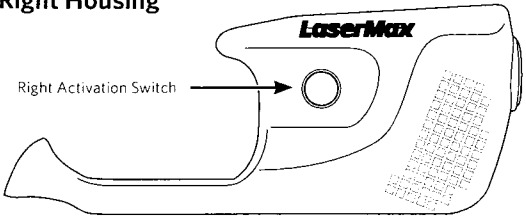

Left Housing

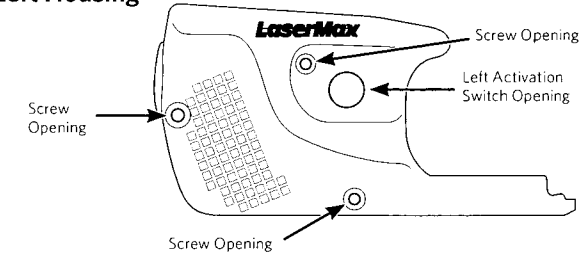

WARNING

Care should be taken when applying oil or lubricant to clean the firearm. Getting oil or lubricant on the light components may cause damage and void the factory warranty. Light assembly should not be submerged or flushed with cleaning solvents.

SPARE PARTS

LMS-CR2 CR2 battery
CF-MS Mounting Screws

For patent information, please visit:
www.lasermx.com/service/patents.aspx.

01785-0-58
Rev A

LaserMax, Inc,
3495 Winton Place
Rochester, NY 14623
Tel. 1-800-527-3703
www.lasermx.com



IF YOU EXPERIENCE
AN ISSUE WITH YOUR
WEAPONLIGHT PLEASE
DO NOT RETURN IT
TO THE STORE.

Contact LaserMax: 1-800-527-3703

WARNING

Avoid direct eye exposure to light.

Do not point light at anything you do not wish to destroy.

CF-G42-L
CF-G42-LC
CF-G42-LH

115+ Lumen LED
Vision Advisory Claim
RG-2: CAUTION: Do not stare at exposed lamp in operation.
May be harmful to the eyes.

LASERMAX LIMITED WARRANTY

Registration of your product is required in order to receive warranty service.
Go to www.lasermx.com/Service/RegisterWarranty.aspx to fill out the registration form.

The product that you have purchased is subject to the terms of this limited warranty. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from State to State. The product you purchased is warranted to be free from defects in material and workmanship at the time of purchase. This limited warranty does not cover expendable parts (i.e. batteries), because they have definite and predictable life expectancies and should be replaced by you, to protect the product and preserve your warranty. This limited warranty also does not cover damages due to equipment or parts, which upon inspection are determined by LaserMax to have become defective after the date of purchase due to abuse, misuse, etc.

The coverage of this limited warranty begins on the date of purchase and ends 5 years after the date of purchase. This limited warranty is extended only to the original purchaser of the product and is not transferable. To be eligible for warranty coverage you as the original purchaser of the product must register the product in our warranty registration system at www.lasermx.com within 90 days of your original purchase. To make a warranty claim you must make a warranty repair request no later than the date that is five (5) years from the date of purchase and obtain a return authorization number from our Warranty Department at 1-800-527-3703. Once you have made

a warranty claim, LaserMax will inspect the product to determine whether it is eligible for warranty coverage. If eligible, LaserMax will repair or replace the part(s)/product that LaserMax, in its sole discretion, determines to be defective during the warranty period. If not eligible, LaserMax will return the part(s)/product to you and inform you why coverage is not available. LaserMax reserves the right to substitute equivalent product replacement at its discretion.

Any and all implied warranties, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement also begin on the date of purchase and end 5 years after the date of purchase. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. The foregoing is your exclusive remedy and LaserMax' exclusive liability for any warranty claim. LaserMax will not, under any circumstances, be liable for any incidental, indirect, consequential, punitive or exemplary damages (even if LaserMax has been notified of the possibility of such damages) resulting from or related to a product including, without limitation, any loss of profits, or loss of opportunity, or damages in excess of your purchase price for the product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

CENTERFIRE™

WEAPONLIGHT
FOR GLOCK 42 PISTOL

Installation Manual

