

What's in the Box




Parts:

- (A) LASER HOUSING
- (B) CLAMPING SCREW (LMS-UNI-CS)
- (C) BATTERY COVER* (LMS-UNI-SKN)
- (D) FLAT HEAD SCREWS(2) (LMS-UNI-SKN)
- (E) BATTERIES 357(2) (LMS-2X357)
- (F) ADJUSTMENT TOOL(2)
- (G) ACTIVATION SWITCH (LMS-UNI-AS)

*contains 2nd adjustment tool


Installing the Uni-Max Laser System

Figures:

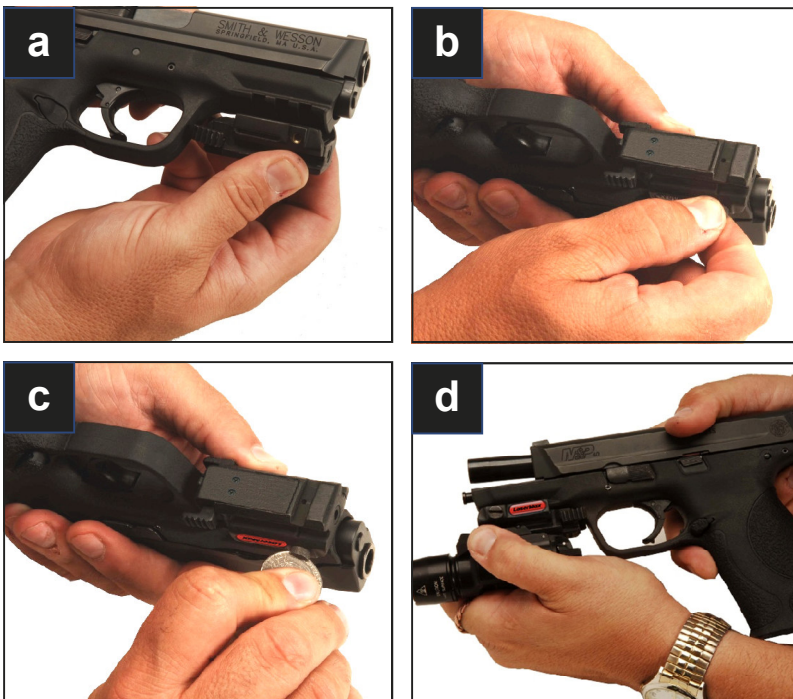

- 1 Remove the magazine from your firearm and clear the action. Make sure your gun is unloaded.
- 2 Check again.
- 3 Slightly loosen the Clamping Screw on the Laser Housing to open rail grips. **Do not remove Clamping Screw.** Mount Uni-Max on the rail of your firearm, making sure the rail grips on the Uni-Max are firmly set into the grooves on rail, and Clamping Screw is in line with notch in rail. (See Figure a)
- 4 Tighten Clamping Screw with fingers (See Figure b). To ensure a secure fit, further tighten Clamping Screw with a screwdriver or coin (a quarter works best). (See Figure c)
- 5 Turn on the laser by pressing in on the Activation Switch from the right or the left side. The center position is off.
- 6 Follow the manufacturer's instructions to attach your choice of additional accessories onto the Uni-Max IPR (Integrated Picatinny Rail). (See Figure d)

Changing the Batteries

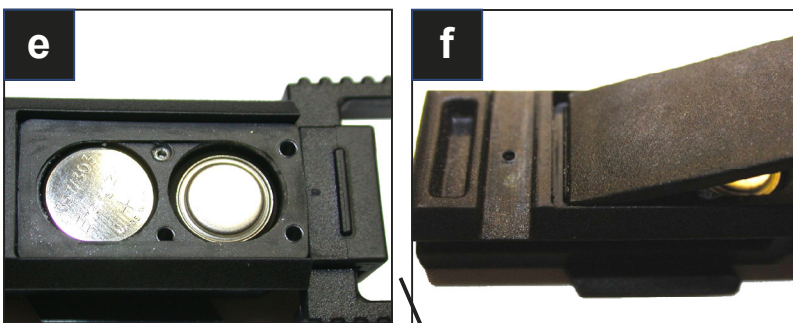


Note correct orientation as printed inside laser housing!

(Left) negative side down. (Right) positive side down.

- 1 Unscrew and remove both Flat Head Screws from Battery Cover.
- 2 Remove Battery Cover from Laser Housing and insert Batteries into unit as shown. (See Figure e)
- 3 Put Battery Cover back in place on Laser Housing, making sure the lip on the cover first engages slot in Laser Housing. (See Figure f)
- 4 Install and tighten both Flat Head Screws into Battery Cover. Do not over tighten.

TIME OUT! To avoid unintentional battery drain, the Uni-Max is set to turn off after 30 minutes of constant use. While in the time out mode, simply cycle the activation switch off to refresh the laser, and turn it back on.

Changing The Laser Mode

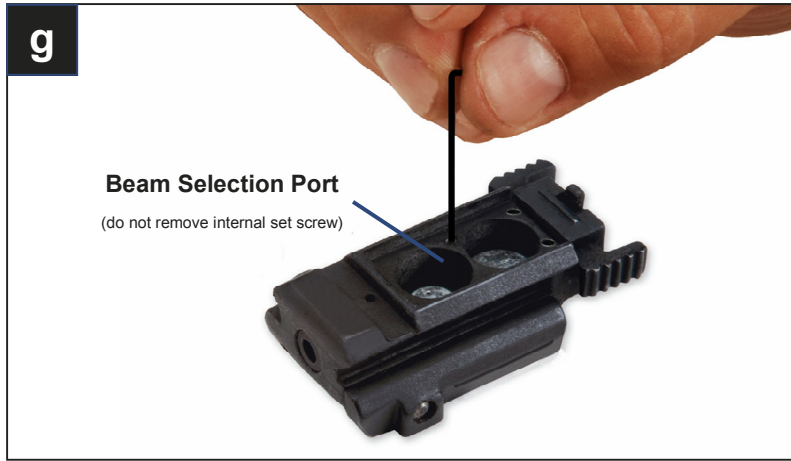

The Uni-Max comes factory set for a modulated (pulsed) beam for higher visibility. To change to a continuous wave (steady on) beam, follow these simple steps:

- 1 Remove the Battery Cover.
- 2 Insert Adjustment Tool into the beam selection port. (See Figure g)
- 3 Slowly turn the Adjustment Tool clockwise until you feel resistance. **Do not over tighten.**
- 4 Reassemble and confirm that your beam is now continuous wave (steady on).
- 5 To return to the modulated (pulsed) laser mode, simply insert Adjustment Tool into the beam selection port and make three counterclockwise turns. **Do not remove the set screw from the beam selection port.**

Aligning The Laser For POA/POI



The hole at the bottom adjusts elevation (vertical alignment). A clockwise turn (left side, to front, to right side of fire-arm) shifts laser down.



The hole at the side adjusts windage (horizontal alignment). A clockwise turn (front, to top, to bottom) shifts laser to the left.

You can easily fine tune your laser to accommodate any weapon platform, type of ammunition or shooting distance.

- 1 To sight in your laser, insert the Adjustment Tool into one of the small alignment ports on the outside of the Laser Housing.
- 2 Fine tune your laser alignment by slowly turning the Adjustment Tool, then checking your laser position against your fixed sights and your POI (Point of Impact).

Important: This alignment should be done at a minimum distance of 10 yards. A one-quarter (1/4) turn equals approximately 3 inches at 10 yards

Warning: Do not turn Adjustment Tool more than one complete turn from factory position. This may cause damage to the Uni-Max and may void your warranty.

NOTE: When installing Uni-Max for the first time, a slight shift in alignment may be noticed after firing, due to settling. Recheck alignment after firing a few magazines and readjust if necessary.

Limited Warranty

Registration of your product is required in order to receive warranty service. Log on to www.lasermax.com to fill out the registration form.

LaserMax, Inc. laser products, except expendable parts, are warranted to be free from defects in material and workmanship for a period of one year from the date of purchase submitted through warranty registration at www.lasermax.com. Expendable parts shall be defined as batteries, springs, and replaceable plastic parts. Expendable parts of some models have definite life expectancies. They should be replaced as recommended to protect the laser and preserve your warranty. This warranty shall benefit, and may be enforced **only** by the initial purchaser of the laser system and is not transferable. Warranty is limited solely to repairing or replacing the part(s), at the discretion of LaserMax, Inc., which proves to be defective during the warranty period. Parts and equipment replaced under warranty will not be returned. Parts and equipment repaired under warranty will be covered for the remaining portion of the original warranty period. This warranty does not apply to equipment or parts which upon inspection by LaserMax, Inc. are determined by LaserMax, Inc. to have become defective or unworkable due to abuse, mishandling, misuse, alteration, negligence, improper installation or maintenance, damage resulting from use of springs not supplied with laser, damage resulting from repair or attempted repair by anyone other than LaserMax, Inc. or a repair facility authorized by LaserMax, Inc., or other causes beyond the control of LaserMax, Inc. All returns must have factory labeling present and legible. All returns require a return authorization number available from our Warranty Department at 1-800-LASER-03. The hours of operation are from 9 a.m. to 5 p.m. EST, Monday through Friday.

LASERMAX, INC. DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE LASERMAX, INC. LASER PRODUCT IS FOR A PERIOD OF ONE YEAR FROM DATE OF PURCHASE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

SPARE PARTS LIST:

LMS-UNI-RG: Removable Rail Grip

LMS-UNI-CS: Clamping Screw (Part: B)-includes spring

LMS-UNI-AS: Activation Switch (Part: G)

LMS-2X357: Batteries: 357(2) (Part: E)

LMS-UNI-SKN: Battery Cover (Part: C), Flat Head Screw (2)(Part: D), Adjustment Tool (Part: F)

ACCESSORIES:

LMS-UNI-MAS-6: Momentary Activation Switch (6" Cord)

LMS-ADP-SIGMA: Rail Adapter for S&W Sigma Series

LMS-ADP-SHOTGUN: Rail Adapter for 1" shotgun mag tube

LMS-UNI-MAS-10: Momentary Activation Switch (10" Cord)

LMS-HKADP-C: Rail Adapter for H&K USP Compact

LMS-HKADP-F: Rail Adapter for H&K USP Full Size


LMS-UNI

RED/ORANGE LASER SIGHT

CLASS 3R VISIBLE LASER PRODUCT

Output: <5 mW

Wavelength: 635 nm

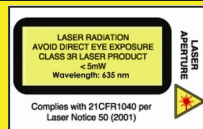

WARNING:

Avoid direct exposure to beam.

LASERMAX, INC.

**3495 WINTON PLACE
ROCHESTER, NY 14623 USA**

Reminder: Aiming laser beam at moving vehicles including boats, aircraft, trains, and construction equipment may be illegal. Check current applicable laws and follow them accordingly.

Complies with 21CFR1040 per laser notice 50 (2001)

1.800.527.3703

Patent No. 7,421,818; other patents pending

installation guide