



PARTS IDENTIFICATION

Right Housing

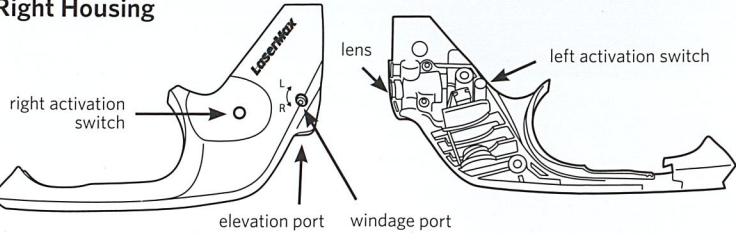

Left Housing

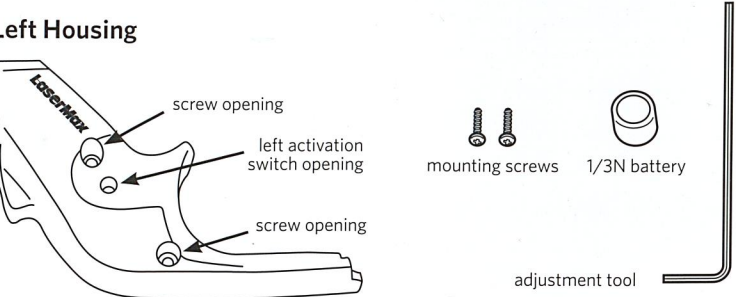

You Tube See this sight installed at www.youtube.com/LaserMaxInc.




! IMPORTANT: Prior to installation, battery change, cleaning or maintenance, follow the firearm operator's manual to ensure that the firearm is unloaded.

INSTALLATION



! This state-of-the-art laser sighting system is designed for use with a specific pistol platform. Do not attempt installation on any other firearm model/s.

1. Place *right housing* onto trigger guard of pistol as shown, ensuring that rear portion of *right housing* is securely positioned (figure 1) and trigger guard is aligned with channel in *right housing* (figure 2).
2. Press *right housing* firmly in place by applying upward pressure to rear portion until housing snaps into place.
3. Insert rear portion of *left housing* into the *right housing* at a 45 degree angle (figure 3).
4. Mate *left housing* with *right housing*, ensuring that *activation switch* passes through opening in left housing. Press together to remove gap.

! Important: CenterFire® *mounting screws* are self-tapping; extra care should be taken when installing them for the first time to ensure that they are screwed in straight. Improper installation could cause the threads to strip.

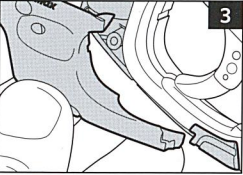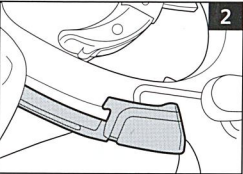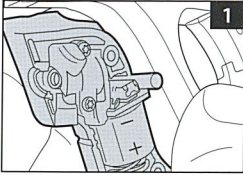

5. Install two (2) *mounting screws* into left housing with a Phillips screwdriver (not provided), starting with screw closest to barrel (figure 4). Next, tighten each *mounting screw* until secure. Do not over-tighten; this may damage the CenterFire® housing.

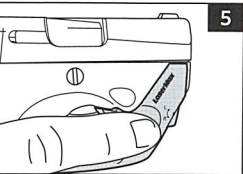
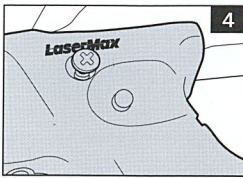


OPERATION

1. To turn the laser on, press in on the *activation switch* from either side (figure 5). Press again to turn the laser off.
2. To switch aiming point from pulse to steady, press and release the *activation switch* from either side to activate the laser. Then, press and hold the *activation switch* for 5 seconds. The laser mode will change. Repeat the process to return to the previous mode.
3. To save power and prevent inadvertent battery drain, the CenterFire® will shut off automatically after a ten minute period of inactivity. Cycle the *activation switch* to turn laser back on.

ALIGNING THE LASER

1. Verify proper alignment by comparing laser aiming point to iron sights at a distance of 10 yards for initial alignment. The laser dot should be slightly above the iron sights.
2. To make adjustments, insert *adjustment tool* into one of the two alignment ports (figures 6 & 7) and slowly rotate the tool while comparing laser position on target to fixed sights. **Important:** Do not rotate *adjustment tool* more than one full turn in either direction from

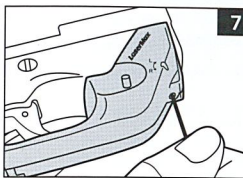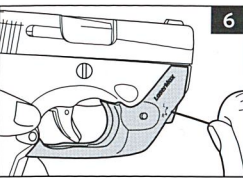


- the factory position. This may cause damage to the laser and void the warranty. A one quarter turn will result in a movement of approximately 3 inches at 10 yards.
3. Windage adjustment: with the muzzle pointing forward and *adjustment tool* inserted into the windage port, a clockwise turn will shift the laser aiming point to the left and a counterclockwise turn will shift the laser beam to the right (figure 6).
 4. Elevation adjustment: with the muzzle pointing forward and *adjustment tool* inserted into the elevation port, a clockwise turn will shift the laser beam up and a counterclockwise turn will shift the laser beam down (figure 7).
 5. Verify zero by shooting target and making additional adjustments as needed.
- Note: a slight shift in alignment may be observed after firing the first time. Recheck alignment after break in and readjust as necessary.

BATTERY REPLACEMENT


TIP: During periods of non-use, test the LaserMax laser periodically to ensure adequate battery levels.

1. Remove *mounting screws* to separate left housing from CenterFire® assembly.

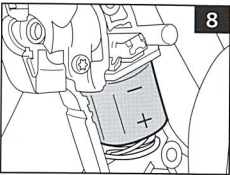


PARTS IDENTIFICATION

Right Housing

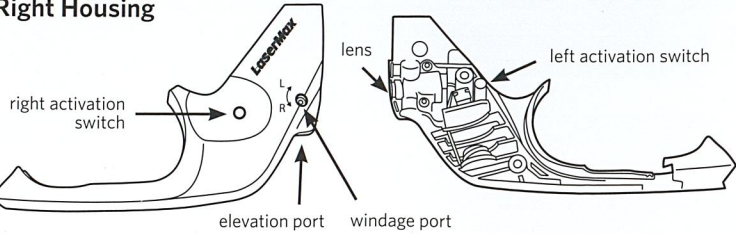

Left Housing

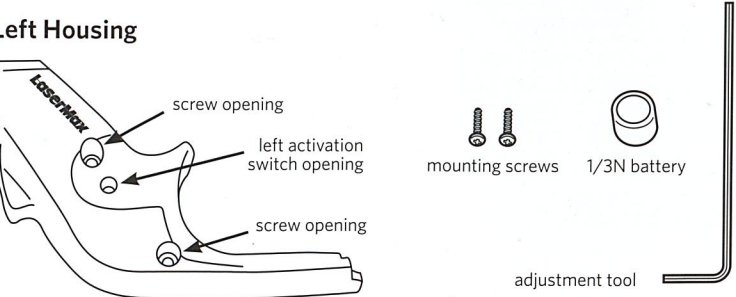

You Tube See this sight installed at www.youtube.com/LaserMaxInc.




! IMPORTANT: Prior to installation, battery change, cleaning or maintenance, follow the firearm operator's manual to ensure that the firearm is unloaded.

INSTALLATION



! This state-of-the-art laser sighting system is designed for use with a specific pistol platform. Do not attempt installation on any other firearm model/s.

1. Place *right housing* onto trigger guard of pistol as shown, ensuring that rear portion of *right housing* is securely positioned (figure 1) and trigger guard is aligned with channel in *right housing* (figure 2).
2. Press *right housing* firmly in place by applying upward pressure to rear portion until housing snaps into place.
3. Insert rear portion of *left housing* into the *right housing* at a 45 degree angle (figure 3).
4. Mate *left housing* with *right housing*, ensuring that *activation switch* passes through opening in left housing. Press together to remove gap.

! Important: CenterFire® *mounting screws* are self-tapping; extra care should be taken when installing them for the first time to ensure that they are screwed in straight. Improper installation could cause the threads to strip.

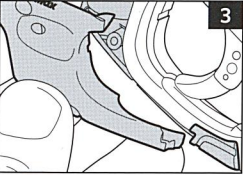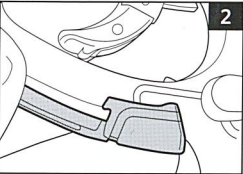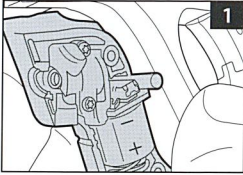

5. Install two (2) *mounting screws* into left housing with a Phillips screwdriver (not provided), starting with screw closest to barrel (figure 4). Next, tighten each *mounting screw* until secure. Do not over-tighten; this may damage the CenterFire® housing.

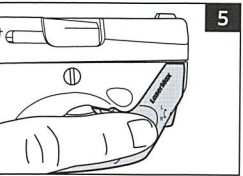
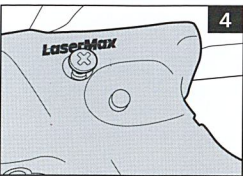


OPERATION

1. To turn the laser on, press in on the *activation switch* from either side (figure 5). Press again to turn the laser off.
2. To switch aiming point from pulse to steady, press and release the *activation switch* from either side to activate the laser. Then, press and hold the *activation switch* for 5 seconds. The laser mode will change. Repeat the process to return to the previous mode.
3. To save power and prevent inadvertent battery drain, the CenterFire® will shut off automatically after a ten minute period of inactivity. Cycle the *activation switch* to turn laser back on.

ALIGNING THE LASER

1. Verify proper alignment by comparing laser aiming point to iron sights at a distance of 10 yards for initial alignment. The laser dot should be slightly above the iron sights.
2. To make adjustments, insert *adjustment tool* into one of the two alignment ports (figures 6 & 7) and slowly rotate the tool while comparing laser position on target to fixed sights. **Important:** Do not rotate *adjustment tool* more than one full turn in either direction from

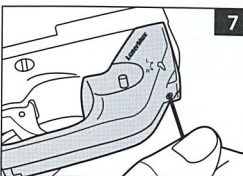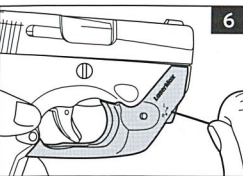


- the factory position. This may cause damage to the laser and void the warranty. A one quarter turn will result in a movement of approximately 3 inches at 10 yards.
3. Windage adjustment: with the muzzle pointing forward and *adjustment tool* inserted into the windage port, a clockwise turn will shift the laser aiming point to the left and a counterclockwise turn will shift the laser beam to the right (figure 6).
 4. Elevation adjustment: with the muzzle pointing forward and *adjustment tool* inserted into the elevation port, a clockwise turn will shift the laser beam up and a counterclockwise turn will shift the laser beam down (figure 7).
 5. Verify zero by shooting target and making additional adjustments as needed.
- Note: a slight shift in alignment may be observed after firing the first time. Recheck alignment after break in and readjust as necessary.

BATTERY REPLACEMENT

TIP: During periods of non-use, test the LaserMax laser periodically to ensure adequate battery levels.

1. Remove *mounting screws* to separate left housing from CenterFire® assembly.

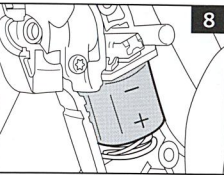



asermax.com/
The LaserMax
state to state,
ip at the time
e definite and
es have been
damage from
improper care
ot specifically
'5) years after
rable. To file a
ization (RMA)
ase. Following
e its eligibility
hat LaserMax,
ble, LaserMax
 reserves the
tion. Any and
cular purpose,
urchase. This
ed warranties.
arranty claim.
al, punitive or
ulting from or
excess of the
that disallow

please visit:
om/patents
2/15, Rev C



View complete installation and battery replacement video tutorials at
www.youtube.com/LaserMaxInc.

REPLACEMENT PARTS

LMS-AT50	adjustment tool
LMS-13N	replacement battery
LMS-2x13N	2-pack replacement batteries
CF-MS	mounting screws



IF YOU EXPERIENCE AN
ISSUE WITH YOUR LASER
PLEASE DO NOT RETURN IT
TO THE STORE.

Contact LaserMax Customer Service: ☎ 800-527-3703



CF-NANO
Red Laser
CLASS 3R VISIBLE LASER
Output Power: <5mW
Wavelength: 600-700nm

REMINDER

Aiming a laser beam at moving
vehicles including boats,
aircraft, trains, and construction
equipment may be illegal. Check
current applicable laws and
follow them accordingly.

WARNING

Avoid direct eye exposure to
beam. Do not point laser at
anything you do not wish to
destroy.

NOTICE:

The FDA requires the label
supplied with your laser be affixed
to the outside of the gun near the
laser aperture.

DANGER

Laser radiation is emitted from the
front aperture of the laser when
the switch is activated.

Copyright © 2015 LaserMax, Inc. All rights reserved. LaserMax and the LaserMax logo are registered
trademarks of LaserMax, Inc. All other trademarks are property of their respective owners.

